




Application Tooling Specification Sheet

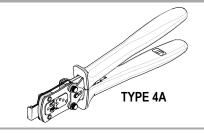

Hand Crimp Tool Order No. 63811-4200

FEATURES

- A full cycle ratcheting hand tool ensures complete crimps
- Ergonomically designed soft handles
- Precisely designed crimping profiles with simple contact positioning
- Easy handling due to outstanding force ratio
- Modular Crimp Head is removable and can be use in the Air Powered Tool Order No.63816-0100, accompanied by Air Powered Crimp Adapter (Order No. 63816-0700).
- % Can also be used in the Battery Powered Tool Order No.63816-0200 (110 V) or 63816-0250 (220 V), accompanied by Battery Powered Crimp Adapter (Order No. 63816-0600).

SCOPE


Products: .54mm (.100") Pitch MX64™ Crimp Terminals, 18-22 AWG.

Terminal Series No.	Terminal Order No.		Wire Size		Insulation Diameter Maximum		Strip Length		
	•Reel Fo	AWG	mm²	mm	ln.	mm	ln.		
	33467-0005	33467-0006	18	0.83	1.91-2.06	.075081	2.70-3.50	.106138	
33467	33407-0003	33407-0000	20	0.58	1.70-1.85	.067073	2.70-3.50	.106138	
	33467-0003	33467-0004	22	0.36	1.50-1.65	.059065	2.70-3.50	.106138	
	33468-0003	33468-0004	18	0.83	1.91-2.06	.075081	2.70-3.50	.106138	
33468			20	0.58	1.70-1.85	.067073	2.70-3.50	.106138	
	33468-0001	33468-0002	22	0.36	1.50-1.65	.059065	2.70-3.50	.106138	
	34736-1002	34736-2002	18	0.83	1.91-2.06	.075081	2.70-3.50	.106138	
34736-	34730-1002	34730-2002	20	0.58	1.70-1.85	.067073	2.70-3.50	.106138	
	34736-1001	34736-2001	22	0.36	1.50-1.65	.059065	2.70-3.50	.106138	

• Customer to cut off terminal from reel: 0.50mm (.020") maximum Cut-off Tab. Terminal will accommodate the following wire specification: SAE: ESB-M1L123-A, WSS-M1L135-A1, and SAE-J1128 Metric: WSK-M1L126-A1

UNCONTROLLED COPY Doc No: ATS-6381142HM Release Date: 04-08-03 Page 1 of 6

Revision: F Revision Date: 08-29-13

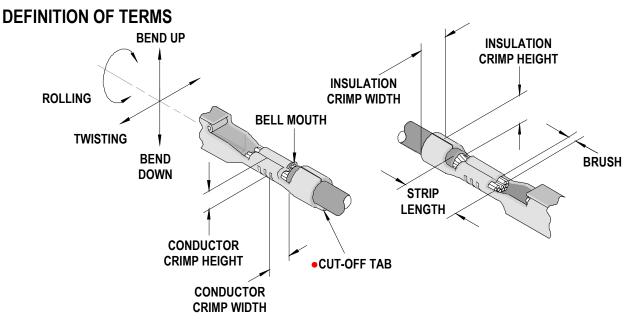

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

CRIMP SPECIFICATION

Terminal		nal Bell mouth			* Cut-off Ta	ıb Maximum	Conductor Brush		
	Series No		mm	ln.	mm	ln.	mm	ln.	
33467	33468	33468	0.25-1.25	.010049	0.50	.020	0.10-0.55	.004022	
	★Not produced by this Hand tool								

Terminal Series No.		es No.	Bend up Bend down	Seam		
3346	7 33468	34736	➤ Crimped samples must pass thrufreely fit in the Checking Aid, Par			Seam shall not be open and no wire allowed out of the crimping area

≭Order Separately

After crimping, the conductor profile should measure the following.

Terminal	Wire Size			Conduct	or Crimp			Insulatio	n Crimp		Pull	Force	Р	rofil	е
Series No.			Hei	ght	Wie	dth	Hei	ght	Wie	dth	Min	imum	1	١W٥	;
	AWG	mm ²	mm	ln.	mm	ln.	mm	ln.	mm	ln.	N	Lb.	22	18	20
	18	0.83	1.10-1.20	.043047	1.75-1.85	.069073	2.00-2.20	.079087	1.85-2.05	.073081	90.0	20.25		Χ	
33467	20	0.58	1.05-1.15	.041045	1.75-1.85	.069073	1.85-2.05	.073081	1.85-2.05	.073081	75.0	17.00			Χ
	22	0.36	0.90-1.00	.035039	1.40-1.50	.055059	1.50-1.70	.059067	1.70-1.90	.067075	50.0	11.25	Χ		
	18	0.83	1.10-1.20	.043047	1.75-1.85	.069073	2.00-2.20	.079087	1.85-2.05	.073081	90.0	20.25		Χ	
33468	20	0.58	1.05-1.15	.041045	1.75-1.85	.069073	1.85-2.05	.073081	1.85-2.05	.073081	75.0	17.00			Χ
	22	0.36	0.90-1.00	.035039	1.40-1.50	.055059	1.50-1.70	.059067	1.70-1.90	.067075	50.0	11.25	Χ		
	18	0.83	1.10-1.20	.043047	1.75-1.85	.069073	2.00-2.20	.079087	1.85-2.05	.073081	90.0	20.25		Χ	
34736	20	0.58	1.05-1.15	.041045	1.75-1.85	.069073	1.85-2.05	.073081	1.85-2.05	.073081	75.0	17.00			Χ
	22	0.36	0.90-1.00	.035039	1.40-1.50	.055059	1.50-1.70	.059067	1.70-1.90	.067075	50.0	11.25	Χ		

Pull Force should be measured with no influence from the insulation crimp. The above specifications are guidelines to an optimum crimp.

UNCONTROLLED COPY Page 2 of 6 Doc No: ATS-6381142HM Release Date: 04-08-03 Revision Date: 08-29-13

Revision: F


NOTE:

Straightness:

- A Crimped terminal lead must be able to pass freely through the Checking Aid **, Part No.63867-3008 (ordered separately if required)
- B Wire on the crimped lead must meet all specification above.


OPERATION


Open the tool by squeezing the handles together, at the end of the closing stroke, the ratchet mechanism will release the handles, and the hand tool will spring open.

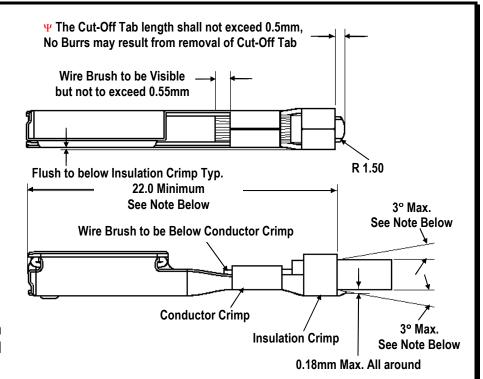

Crimping Terminals

- 1. Lift the wire stop blades up.
- Insert the terminal fully into the correct die profile and the locator slot until the terminal is fully seated and stops.

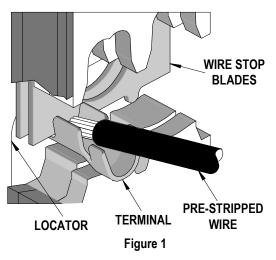

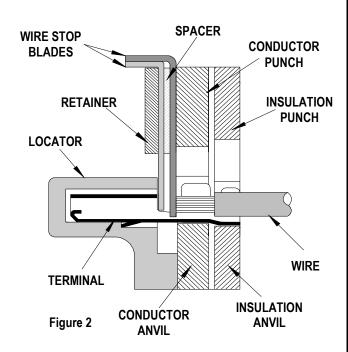

- 3. Bring down the wire stop blades. Make sure the wire stop blades are fully seated on the terminal behind the conductor grip section.
- 4. Slide the pre-stripped wire into the terminal; make sure to aim the wire brush towards the tip point on the wire stop blade. See Figure 1. Align the wire so that it is parallel and sitting into the terminal. Maintain a light and constant pressure on the wire that is seated in the terminal at all times. (Do not let go of the wire.) Be sure to hold the wire and terminal in place until the terminal is fully crimped. See Figure 2.
- 5. Close the tool until the ratchet releases.

Doc No: ATS-6381142HM Release Date: 04-08-03 **UNCONTROLLED COPY** Page 3 of 6 Revision: F Revision Date: 08-29-13

- 6. Lift the wire stop blades up.
- 7. Carefully remove the crimped terminal.

Note: The tamper proof ratchet action will not release the tool until it has been fully closed.

Note: To maintain good brush control and a consistent bell mouth the crimping instructions must be followed.

Maintenance

It is recommended that each operator of the tool be made aware of, and responsible for, the following maintenance steps:

- 1. Remove dust, moisture, and other contaminants with a clean brush, or soft, lint free cloth.
- 2. Do not use any abrasive materials that could damage the tool.
- 3. Make certain all pins; pivot points and bearing surfaces are protected with a thin coat of high quality machine oil. Do not oil excessively. The tool was engineered for durability but like any other equipment it needs cleaning and lubrication for a maximum service life of trouble free crimping. Light oil (such as 30 weight automotive oil) used at the oil points, every 5,000 crimps or 3 months, will significantly enhance the tool life.
- 4. Wipe excess oil from hand tool, particularly from crimping area. Oil transferred from the crimping area onto certain terminations may affect the electrical characteristics of an application.
- 5. When tool is not in use, keep the handles closed to prevent objects from becoming lodged in the crimping dies, and store the tool in a clean, dry area.

Miscrimps or Jams

Should this tool ever become stuck or jammed in a partially closed position, **Do Not** force the handles open or closed. The tool will open easily by lifting the ratchet release lever. See Figure 6.

Warranty

This tool is for electrical terminal crimping purposes only. This tool is made of the best quality materials. All vital components are long life tested. All tools are warranted to be free of manufacturing defects for a period of 30 days. Should such a defect occur, we will repair or exchange the tool free of charge. This repair or exchange will not be applicable to altered, misused, or damaged tools. This tool is designed for hand use only. Any clamping, fixturing, or use of handle extensions voids this warranty.

CAUTION: Repetitive use of this tool should be avoided.

CAUTIONS:

- 1. Manually powered hand tools are intended for low volume or field repair. This tool is NOT intended for production use. Repetitive use of this tool should be avoided.
- 2. Insulated rubber handles are not protection against electrical shock.
- 3. Wear eye protection at all times.
- 4. Use only the Molex terminals specified for crimping with this tool.

Notes:

- 1. This tool should only be used for the terminals and wire gauges specified on this sheet.
- 2. This tool is not adjustable for crimp height; however crimp force is adjustable (See instructions above). Variations in tools, terminals, wire stranding, and insulation types may affect crimp height.
- 3. This tool is intended for standard conductor sizes. It may not give a good insulation crimp support for all insulation sizes.

Doc No: ATS-6381142HM Release Date: 04-08-03 **UNCONTROLLED COPY** Page 4 of 6 Revision: F Revision Date: 08-29-13

- Molex does not repair hand tools (see warranty above). The replacement parts listed are the only parts available for repair. If the handles or crimp tooling is damaged or worn, a new tool must be purchased.
- 5. Pull force should be used as the final criteria for an acceptable crimp. Pull force is measured with no influence from the insulation crimp. The insulation should be stripped long (1/2 in.) so the insulation grips on the terminal do not grip the wire insulation or the conductor. Refer to Molex Quality Crimping Handbook 63800-0029 for additional information on crimping and crimp testing.
- 6. Molex does not certify crimp hand tools.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals and tooling.

Applications for the Modular Crimp Head

WARNING: NEVER operate, service, install, or adjust this Modular Crimp Head without proper instruction and without first reading and understanding the instructions in the proper Manual or Specification Sheet. See Chart below for the correct Manual or Specification Sheet.

WARNING: NEVER install tooling or service this tool while it is into any power source. Disconnect the power by unplugging or turn off the Actuator from its power source.

CAUTION: Keep fingers away from the crimping area when operating this tool. It may cause severe injury.

CAUTION: Wear safety glasses when operating or serving this tool.

The chart below shows all applications for this Modular Crimp Head.

Modular Crimp Head Order No.	Tool Order no.	Tool Description	Adapter Order No.	Adapter Description	Figure No.
	63816-0000	Hand Crimp Frame (Short)	N/A	N/A	3
	63816-0050	Hand Crimp Frame (Long)	N/A	N/A	3
63811-4270	63816-0200	Battery Power Tool (110 V)	63816-0600	Battery Power Crimp Adapter	4
	63816-0250	Battery Power Tool (220 V)	63816-0600	Battery Power Crimp Adapter	4
	63816-0100	Air Power Tool	63816-0700	Air Power Crimp Adapter	5


Applications for the Modular Crimp Head							
Hand Crimp Tool	Battery Powered Tool	Air Powered Tool					
LOCKING PINS HAND CRIMP HEAD HAND CRIMP FRAME LONG OR SHORT	LOCKING PINS BATTERY POWER CRIMP ADAPTER BATTERY POWERED TOOL	LOCKING PINS CRIMP HEAD AIR POWER CRIMP ADAPTER LOCKING POWER TOOL					
Figure 3	Figure 4	Figure 5					

UNCONTROLLED COPY Doc No: ATS-6381142HM Release Date: 04-08-03 Page 5 of 6 Revision Date: 08-29-13

Revision: F

PARTS LIST

Hand Crimp Tool 63811-4200								
Item	Order Number	Description	Quantity					
1	63811-4270	Modular Crimp Head	1 (Ref)					
2	63816-0050	Hand Crimp Frame (Long)	1 (Ref)					
3	63811-4275	Locator	1					
4	63816-0001	Locking Pin	2					
5	63600-0525	Handle Spring	1					
6	63600-0520	Crimping Spring	2					

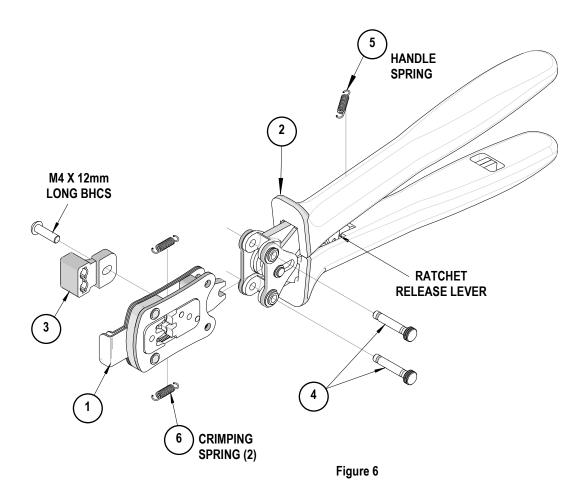

Visit our Web site at http://www.molex.com

Doc No: ATS-6381142HM **UNCONTROLLED COPY** Page 6 of 6 Release Date: 04-08-03 Revision Date: 08-29-13

Revision: F